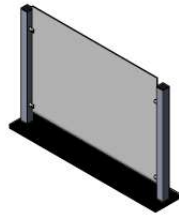

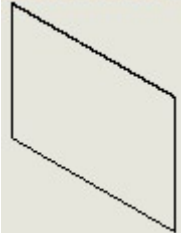
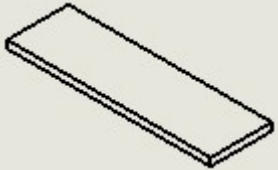


SG1-2430 ASSEMBLY INSTRUCTIONS



COMPONENTS		
VERTICAL SUPPORT	2	
ACRYLIC	1	
BASE	1	

REQUIRED TOOLS –PHILIPS SCREWDRIVER

1. INSERT THE INCLUDED SCREWS THROUGH THE BOTTOM OF THE BASE.
2. USE SCREW DRIVER TO TIGHTEN THE SCREWS INTO THE BOTTOM OF THE VERTICAL SUPPORTS.
3. REMOVE PROTECTIVE COVERING FROM ACRYLIC.
4. ALIGN SIDE HANGERS AND INSERT ACRYLIC TO DESIRED HEIGHT.
5. TIGHTEN SIDE HANGERS WITH INCLUDED ALLEN KEY