





SG1 ASSEMBLY INSTRUCTIONS

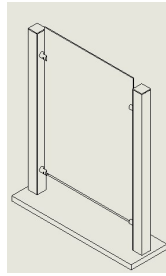

COMPONENTS		
VERTICAL SUPPORT	2	
ACRYLIC	1	
BASE	1	

REQUIRED TOOLS –PHILIPS SCREW DRIVER

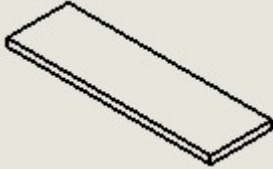1. INSERT THE INCLUDED SCREWS THROUGH THE BOTTOM OF THE BASE.
2. USE SCREW DRIVER TO TIGHTEN THE SCREWS INTO THE BOTTOM OF THE VERTICAL SUPPORTS.
3. ALIGN SIDE HANGERS AND INSET ACRYLIC TO DESIRED HEIGHT.
4. TIGHTEN SIDE HANGERS WITH INCLUDED ALLEN KEY