


## SG2-2430 ASSEMBLY INSTRUCTIONS

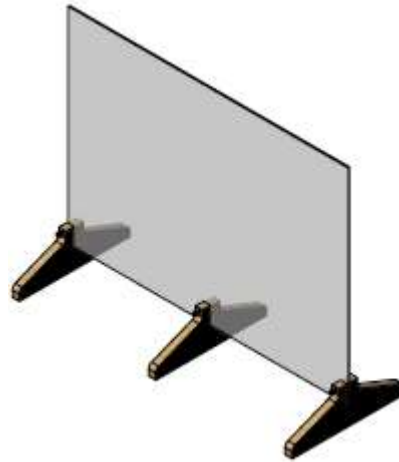

COMPONENTS		
ACRYLIC	1	
FOOT	3	

### REQUIRED TOOLS –PHILLIPS SCREWDRIVER

1. INSERT THE INCLUDED SCREWS INTO THE THREADED HOLES ON THE FEET.
2. INSERT ACRYLIC INTO THE FOOT SLOTS.
3. USE PHILLIPS SCREWDRIVER TO SNUG THE SCREWS TO GRIP THE ACRYLIC.